



1
This is what your banner stand will look like when it arrives.



2
Unfold the 3 metal legs of tripod base, the Grasshopper-X will stand on its own.



3
Lift 2 upper arms attached to gear mechanism simultaneously until they stop.



4
Unlock the gray toggle switch located on the central pole by rocking it to center.



5
Now pull up on central pole to increase the height of stand.



6
Attach banner at bottom of stand first.



7
Then attach top of banner to the upper arms.



8
Now adjust stand height again by pulling up on central pole until banner becomes taut.



9
Rock the toggle to the left or right to lock height of central pole in place.

10



YOUR GRASSHOPPER-X BANNER STAND IS READY TO USE!